




1. Volume up / Next
2. Play / Pause
3. Volume down / Previous
4. Power On / Off
Mode change

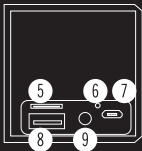

5. Micro SD playback
6. LED indicator
7. USB charging port
8. USB playback
9. Line-in

PACKAGE CONTENTS

- Speaker, amount: 1
Charging cable, amount: 1
User manual, amount: 1

CHARGING THE BATTERY

- Connect the supplied charging cable to the charge input and a USB port on your computer or USB charger.

The red LED is lit during charging.

If Bluetooth mode is on, the LED will be blinking blue, while red is lit at the same time.

When the battery is fully charged, the red LED is turned off.

It can take up to 2 hours for an empty battery to be fully charged.

PAIRING THE SPEAKER WITH A BLUETOOTH DEVICE

- Power the speaker on.
Press and hold the ON/OFF/M button for 3 seconds to power the speaker on.
The blue LED starts blinking.
The speaker is now detectable by other Bluetooth devices.
- On your device, search for Bluetooth devices.
Refer to your tablet user manual if needed.
- On your device, select the speaker.
The blue LED starts to glow, indicating successful pairing.

PLAY MUSIC USING USB FLASH DRIVE / MICRO SD CARD

- Connect a USB Flash drive /Micro SD card (Max 32 GB) and power on the speaker.

A voice alert is played: "Music play mode".
Music will be played automatically.

HANDSFREE

- Power the speaker on.
- Pair the speaker with Bluetooth to your device.

A voice alert is played when someone calls.

- Press play to answer.

FM RADIO

- Power the speaker on.
- Connect a 3.5 mm audio cable.
- Press the play button to search for FM stations.

PHOTO SELFIE

- Power the speaker on.
- Pair the speaker with Bluetooth to your device.
- Turn on camera mode on your device.
- Press play button twice to take a picture.

Technical specifications

- Charge input: usb micro b
- Feature: photo selfie
- Bluetooth version: 2.1 + edr
- Impedance: 4 Ω
- Effect: 3w
- Speaker size: 40 mm
- Rechargeable battery: 300mah li-on
- Run time: up to 2 hours
- Charging time: up to 1 hour
- Weight: 134 g

STREETZ

MANUAL

CM686

CM867