


PACKAGE CONTENTS

Speaker, amount: 1

Charging cable, amount: 1

Strap, amount: 1

User manual, amount: 1

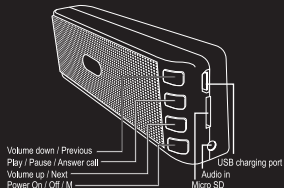

CHARGING THE BATTERY

- Connect the supplied charging cable to the charge input and a USB port on your computer or USB charger.

The red LED is lit during charging.

If Bluetooth mode is on, the LED will be blinking blue, while red is lit at the same time. When the battery is fully charged, the red LED is turned off.

It can take up to 2 hours for an empty battery to be fully charged.

PAIRING THE SPEAKER WITH A BLUETOOTH DEVICE

- Power the speaker on.

Press and hold the ON/OFF/M button for 3 seconds to power the speaker on.

The blue LED starts blinking.

The speaker is now detectable by other Bluetooth devices.

- On your device, search for Bluetooth devices. Refer to your tablet user manual if needed.

- On your device, select the speaker. The blue LED starts to glow, indicating successful pairing.

PLAY MUSIC USING MICRO SD CARD

- Connect a Micro SD card (Max 32 GB) and power on the speaker. A sound alert is played. Music will be played automatically.

HANDSFREE

- Power the speaker on.
- Pair the speaker with Bluetooth to your device. A voice alert is played when someone calls.
- Press play to answer.
- Press play to hang up.

- Double press play to redial last call.

AUDIO CABLE CONNECTION

- Power the speaker on.
- Connect a 3.5 mm audio cable to the speaker and your device.

The speaker is connected to your device.

- Press the ON/OFF/M button to change mode to line in / audio cable.

Voice alert "line-in mode" confirms line-in / audio cable mode.

FM RADIO

- Power the speaker on.
- Press the ON/OFF/M button to change mode to FM radio.
- Press the play button to search for FM stations.

CHANGE SONG / TRACK

- Short press on + for next song.
- Short press on - for previous song.

ADJUST VOLUME

- Long press on + for volume up.
- Long press on - for volume down.

Technical specifications

- Charge input: USB micro B
- Bluetooth version: 2.1 + EDR
- Impedance: 4 Ω
- Effect: 2x 3W
- Speaker size: 31 mm
- Rechargeable battery: 300mAh LI-ON
- Run time: Up to 3 hours
- Charging time: Up to 2 hours
- Weight: 120 g

STREETZ

MANUAL

CM670

CM671

CM672